



# Installation Instructions for the JDS LPR (Freestyle)

Thank you for purchasing a JDS LPR regulator. In this document, you'll find installation instructions and answers to frequent questions. Should you have any trouble with installation, please contact STD Industries via the contact information shown at the bottom of this page.

## Parts List

- (1) JDS LPR for the Freestyle
- (1) -010 O-ring (Buna)
- (1) Heavy Spring (Read instructions before installing)

## Installation Instructions

The JDS LPR is a drop-in accessory for ICD's Freestyle regulator. The only required tool for installation is a 5/32" allen wrench, used to adjust the pressure of the LPR. In some cases, a strap wrench may also be required to remove the old LPR.

Once you've removed your LPR, inspect the LPR cavity in the marker for debris. Remove debris if necessary. Place the -010 O-ring, included with the LPR, on the top of the JDS adapter (see illustration 1). Holding the JDS LPR upright, so that the o-ring does not slip, screw the JDS LPR into the body of the marker. You can use a bit of Dow 33 grease to hold the o-ring in place while you're installing the JDS regulator. Take care not to over-tighten the regulator--hand tightening is sufficient.

With the JDS LPR installed, air up the marker, listening for leaks. Leaks may occur if the -010 O-ring is not in the proper position, or if the JDS LPR is not screwed in completely.

The JDS LPR is set at approximately 80 PSI at the factory. To adjust pressure, use a 5/32" allen wrench on the allen hole located on the front of the regulator. To increase pressure, turn the allen wrench clockwise. To decrease pressure, turn the allen wrench counter-clockwise (see pressure adjustment diagram on right).

To set your LPR pressure, follow the instructions outlined in the Freestyle manual. Dry-fire marker between adjustments to determine if marker is cycling properly. Use small adjustments until desired pressure setting is achieved. If the bolt appears to stick, or the shots appear too weak, decrease the LPR pressure. If the bolt does not cock all the way back, or if there is a leak down the barrel, the pressure is too low. Your LPR pressure should be in the range of 50-80 PSI. If the LPR pressure is set too high, the solenoid valve will bleed off, causing a leak from inside the marker.

**HEAVY SPRING NOTE:** Some Freestyles equipped with HE bolts require a higher pressure to operate. If after setting up your JDS LPR, you cannot get the marker to function properly, replace the main piston spring with the heavier spring included in the package. The lighter spring comes installed in the JDS LPR and is sufficient for most Freestyle configurations. To change springs, de-gas gun and remove the adjuster cap. The main piston spring sits beneath the cap.

## Common Questions

What is the silver set screw for?

The silver set screw is used to seal an air passage. It serves no other function, and should not be removed.

Should the JDS LPR be lubricated?

Yes. You can re-grease the main piston, using Dow 33. To remove the main piston, unscrew the adjustment cap, then remove the spring. The main piston can be removed using a pair of needle-nose pliers. Use care when removing. No other parts need re-greasing.

Is the JDS LPR rebuildable?

Yes, though it should be rebuilt only by an authorized STD technician. Some components are under pressure, even when the regulator is not connected to an air source. Injury may result if serviced by the user.


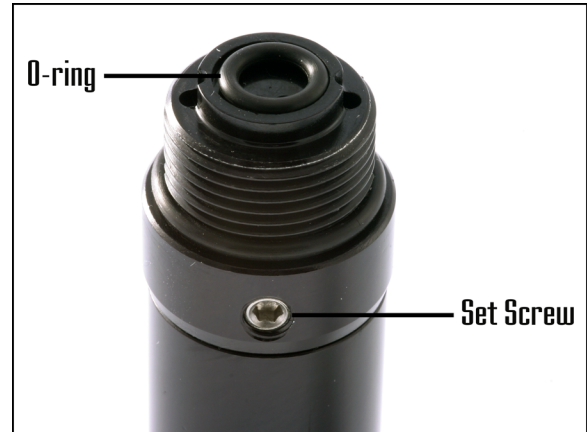


Illustration #1



Pressure Adjustment Diagram

Adjustment  
Point

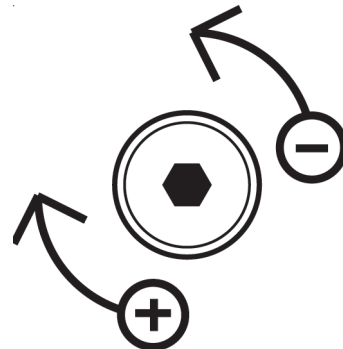

STDindustry.com  
sales@destructivecustoms.com  
413-883-4328

Document updated 12/13/14 rev. 1.5